



The-Garage-Door-Lock.com

The App Installation Manual

**Read and follow all safety rules
and operating instructions before
first use of this product.**

By Elocksys Inc.



Kit Components

The Garage Door Lock



Key Pad



Remote




Wall Console


Control Box



Clip

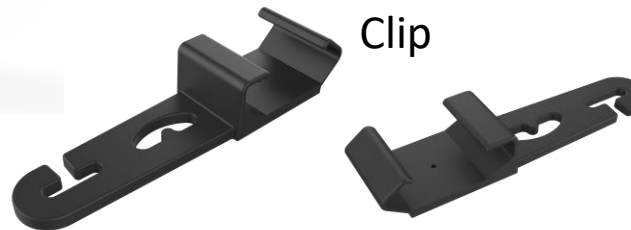

Hooks

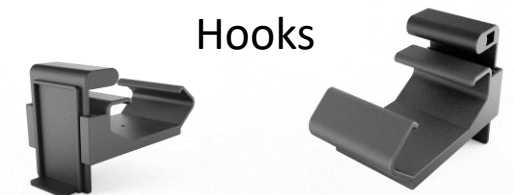

Garage Door Lock

The garage door lock kit includes the lock box, wall console, outside panel and remote control, which is used for smart control of garage door.

Lock Box

Function: Lock/ Unlock/
Adaptive remote control

Delete all passwords and matched remote control: long press "SETUP"&"LEARN" at the same time

Delete all passwords and matched remote control: long press "SETUP"&"LEARN" at the same time till the working indicator light flickering 2 times and beeps for one time.

Wall Console

Function: 1. Lock/ Unlock 2. Close the auto lock function 3. Enable/disable other lock mode.

Instructions

1. Press the button to open the lock.
2. Press "auto close" to stop this function.
3. Switch the button (bottom right) to the close status that will disable all other locking methods except the button on the wall console.
4. Switch the button (bottom right) to the open status that will enable all locking methods.

Outside panel

User can control lock/unlock by setting password on the outside panel while all locking methods are enabled.

**Outside panel configuration
(Configuration has completed
before delivery.)**

1. Short press "SETUP" button on the lock box, the working indicator light will turn to green and keep flickering slowly.
2. Press the "RESET" button on the outside panel with needle, till the keypad flickering slowly.

3. After con-fig successfully, keypad will light for 2 seconds. At the same time, the working indicator light of lock box will flicker twice and beeps.
4. If fail to con-fig, keypad light will turn off.

Adding password on outside panel:

1. Short press “LEARN” button on lock box, the working indicator light will turn to yellow and keep flickering slowly for 30 seconds.
2. Enter a 6-digit password and press “#” to confirm.
3. After setting successfully, the working indicator light of lock box will flicker twice and beep.

Open the lock with outside panel.


1. Enter your 6-digit password and press “ENTER” to unlock.

1.4. Remote control

User can control lock/unlock by using remote control while all locking methods are enabled.

Remote control configuration (Configuration has completed before delivery.)

1. Short press “SETUP” button on the lock box, the working indicator light will turn to green and keep flickering slowly.
2. Press the “RESET” button on the remote control with needle, till the LED light keeps flickering slowly.

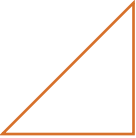

3. After con-fig successfully, LED indicator light of remote control will turn on for 2 seconds. At the same time, the working indicator light of lock box will flickering twice and beeps.

4. If fail to con-fig, the LED indicator light will turn off.

After con-fig successfully, user can press the remote control button to unlock.



APP instruction

3.1. Register

After downloaded APP, user can register a new account on below login page.

Enter your email address and click to get the verification code, then check your email and enter the code to click next.

Setting your name, password and agree the service agreement, then click sign up so as to complete the registration.

. Adding devices on APP

3.2.1. Click “+” to add devices.

3.2.2. Select “add manually”.

3.2.3. Select “Garage Lock Kit”.

3.2.4. WiFi Select Wi-Fi network that your mobile phone has been connected.

bee space Cancel




Bee Space Lifestyle

GET



Idle Rocket Launch Rocket Launch Company 1.66K

GET

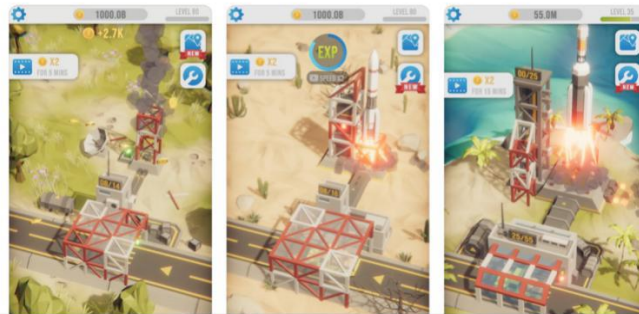

IOS版



Android版



3.2.5. Press “SETUP” button on the lock box for 5 seconds till the working indicator light turn to blue and flickering slowly, then click “next”.

3.2.6. Connect the hotspot from lock box on the Wi-Fi setting page.

3.2.7. After connected WiFi, then back to APP and click “to connect”.

3.2.8. Lock Box connect to Network.

Click “add to home”

3.2.9. Confirm the gateway and add it to home page.

1. When the working indicator light turns to green and flickering.
2. Press setting button, the working indicator light stop flickering and keeps green.
3. Click next.
Click next.

3.3. Using APP to control the lock.

3.3.1. Operation page

User can lock/ unlock the garage door lock, setting auto close and check the operation record and alarm record.

3.3.2. Settings page

User can check the garage door lock information, as well as check/ add other devices.

No SIM

9:08 AM

41%



Bee Link

Log in with verification code

Please enter your account

Password

Forgot Password

Sign up



Log in

No SIM

9:09 AM

42%



Bee Link

中国



Please enter your phone...

Get ve...n code



Verification code

Next

Use account password [Login](#)

No SIM

9:13 AM

44%



Set account and password



Please enter the nickname



Set Password



Enter the password again

Sign up



I agree 《Beesmart Smart Lock APP Registration》 and 《Beesmart Intelligent Platform Service Agreement》

No SIM

9:22 AM

50%

Default Home



0 devices

All



Home



Smart



Me

No SIM

9:24 AM

51%



Adding method



Scan

Find QR code on the box or product, then click to scan



Add Manually

Add the device manually from the list



Auto Search

The gateway automatically searches for subdevices

No SIM

9:25 AM

52%



Select type of device



Temperature & Humidity Sensor
THZ01



Waterleakage Sensor
WLZ01



Magnetic Sensor
GMZ01



VOC Sensor
BSZ-VCCV1



Wireless Air-Conditioning Contr...
BSZ-ACRS485



Wireless Air-Conditioning Contr...
BSZ-AC4L



Wireless Curtain Controller
BSZ-CT1



Floor Heating Controller
BSZ-FH1/R



Wireless Switch Controller
BSZSS05A



Garage Lock Kit
BSZ-GW06G



Numeric Keyboard
BSZ-GK12



Garage Lock Remote Controller
BSZ-GK02





Wi-Fi config



Select Wi-Fi network that the mobile phone connected

Please set your Wi-Fi to be 2.4GHz



BS-OTA111




Please enter the WIFI password


Next



Turn on the device's hotspot

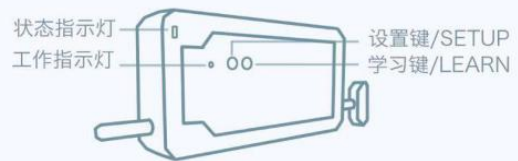

设置键/setup

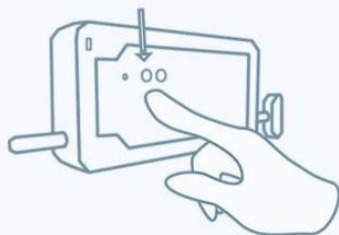

车库锁

Make sure the device has powered on
Press and hold the reset button for 5 seconds until
the indicator turns blue and blinks (about 2s once),
click next

Next

No SIM

9:28 AM

53%




Set WIFI connection



Refer to the picture below to set up your phone's WIFI connection

Go to the Phone Settings menu

Open the WLAN list, find the "garage-lock" hot spot, select and connect (password: 12345678)

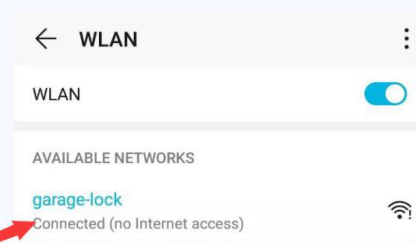

Already connected OK, go to the next step

To connect

无 SIM 卡

下午2:34

91%

< 设置

Wi-Fi

Wi-Fi



garage-lock



选取网络...

beesmart-gw-74EE2AF1CEE4



beesmart-gw-7CA7B0C9B938



BS-OTA111



BS-XR871-GW-444F451C5F5E



DIRECT-m1ML-2160 Series



HUAWEI-4G



MERCURY_540F



PandoraBox_D1CA55_5G



printer



TP-LINK_B4CD



Tritech-ZS



其他...

No SIM

9:32 AM

55%




Set WIFI connection



Refer to the picture below to set up your phone's WIFI connection

Go to the Phone Settings menu

Open the WLAN list, find the "garage-lock" hot spot, select and connect (password: 12345678)

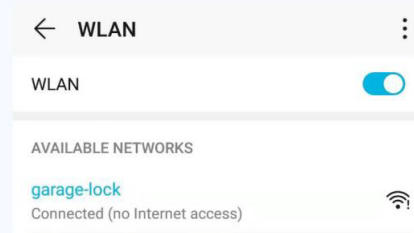

Already connected OK, go to the next step

To connect

Make sure the hot spot is connected and proceed to the next step

无 SIM 卡

下午2:54

64%



Connecting



Loading...

not leave this page or power off when the device is connected to the Inter



No SIM

9:37 AM

58%



Succeed




Garage Lock Kit


Add to home



device operation

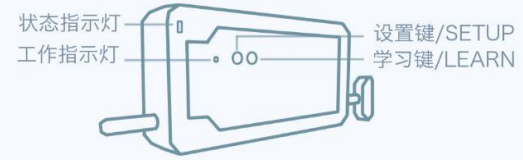

设置键/setup

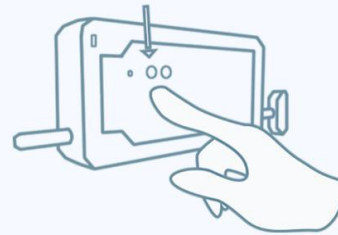

Garage Lock Kit

1. See the work indicator flashing green
2. Press the setting key

Next

No SIM

9:38 AM

58%



Successfully add device



Product Name

Garage Lock Kit

Location

Default Room 

Model

BSZ-GW06G

MAC

00158D3A284F

Next

No SIM

9:42 AM

60%

Default Home



1 devices



Garage Lock Kit

Default Room

Status: Locked



Home



Smart



Me

No SIM

9:43 AM

61%



Garage Lock Kit



Status: Locked

Automatically close the lock: not set 



Alarm



Record

No SIM

9:44 AM

61%



Garage Lock Kit

Device Name

Garage Lock Kit

Location

Default Room



 0 devices



Remove devices



FCC Caution:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.




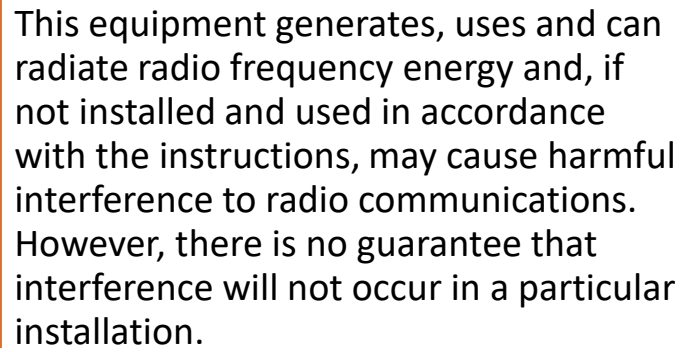
IMPORTANT NOTE:

FCC Radiation Exposure Statement:


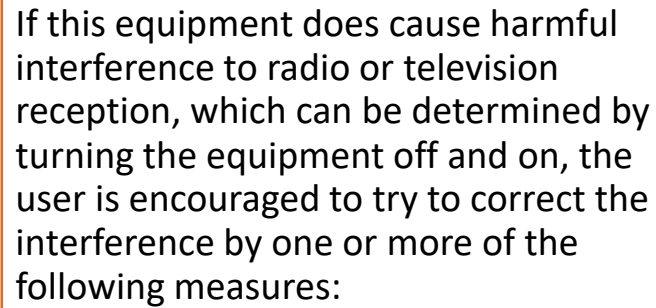
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radio & your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.




This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.



If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

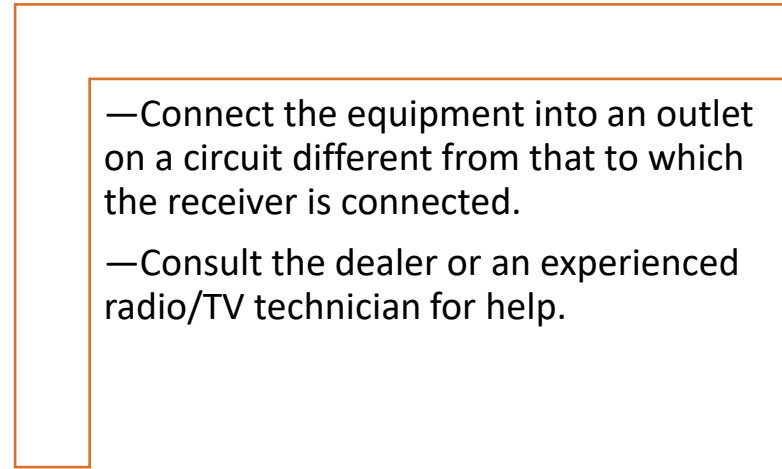- 
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.

App Instructions



