



The-Garage-Door-Lock.com

Keypad Installation Tel. 760-525-1017 Text 769-525-1017

Remote Programming – do this at a quick pace
Short press the learn button on the Garage Door Lock
Enter a 6 digit passcode on keypad, then press #
Enter 6 digit passcode then press enter (Garage door should close or open).
Programming is now complete

Short press the learn button on the Garage Door Lock
With a small pin/needle, press and hold the reset button on the remote until the light blinks then release.
The light on the remote should go solid and then off completely
Press the large button on the remote (The Garage door lock should beep then close or open).
Programming is now complete

If for some reason the Keypad Programming Process does not respond, please follow these steps to reboot connection

Short press setup button on the garage door lock, light on lock should start to flash green.
With small pin/needle press and hold reset button on the keypad until the light on keypad blinks, then release.
Light on keypad should go solid and then off completely.
REPEAT ABOVE STEPS TO PROGRAM THE KEYPAD.
MAKE SURE YOU HEAR A CLICK WHEN PRESSING
THE RESET BUTTON AT ANYTIME!